



Stronic URP125-075



TECHNICAL SPECIFICAITON

Recording Time:	max capacity 144 hrs
Battery Life:	75 Hrs
Standby Time:	125 Days in voice activation
Charging Time:	3 hrs
Size:	50x 21 x 10 mm
Weight:	27.2g


Stronic URP225-135



TECHNICAL SPECIFICAITON

Recording Time:	max capacity 135 hrs
Battery Life:	135 Hrs
Standby Time:	225 Days in voice activation
Charging Time:	4 hrs
Size:	97 x 80 x 3,5mm
Weight:	27.2g

Stronic URP-250

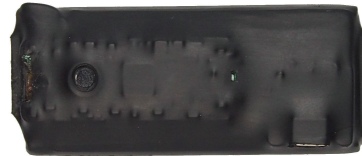

TECHNICAL SPECIFICAITON

Recording Time:	max capacity 135 hrs
Battery Life:	150 Hrs
Standby Time:	250 Days in voice activation
Charging Time:	4.5 hrs
Size:	76 x 33 x 14 mm
Weight:	44 g

Stronic URP-450



TECHNICAL SPECIFICAITON

Recording Time:	max capacity 144 hrs
Battery Life:	140 Hrs
Standby Time:	450 Days in voice activation
Charging Time:	6 hrs
Size:	54 x 34 x 26 mm
Weight:	86 g

PACKAGE CONTAINS

1. STronic device
2. Charger
3. USB MINI cable

TIME SET-UP

Go to: www.stealthtronic.com/timeset/

CHARGING

When unplugged from the cable:

0–30% battery : No flash or ligh
 30–70% battery : One flash
 70–100% battery: Light ON

DISCLAIMER

This user manual can be slightly different from specific product. Before start using the device, check your local legal terms. Neither supplier nor distributor don't assume and responsibility for using device in conflict with local law.

USEFUL INFORMATION


For getting the files, you will need to connect the device in switched off position.



Stronic URP125-075



Stronic URP-250

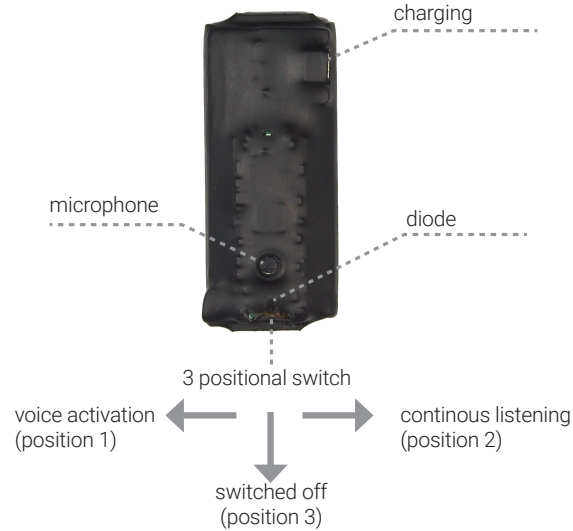

Stronic URP225-135



Stronic URP-450



QUICK SET-UP GUIDE:

- DEVICE CHARGES WITH CABLE ONLY (faster charging is with enclosed adaptor)
- USE APPROPRIATE OPERATING SYSTEM (Windows XP,7,8,8.1)
- DEVICE IS NOT WATER RESISTANT

POSITION 1

CONTINUOUS LISTENING

When you place the device on the table, with the connector facing up, like on the FIGURE 2, and you push the switch to the left you will activate the mode of continuous listening. In the basic module STronic UR125-075 the second number denotes the amount of hours in this case 75 hours that the device can record.

POSITION 2

VOICE ACTIVATION

When you place the device on the table, with the connector facing up, like on the FIGURE 2, and you push the switch to the right you will activate the mode of continuous listening. In the basic module STronic UR125-075 the first number denotes the amount of days in this case 125 days that the device can last in standby.

POSITION 3

SWITCHING OFF

When you put this device into Position 3, it will be SWITCHED OFF.