

USER MANUAL: UltraLife camera in a Air Freshener



UltraLife series is especially practical for long term surveillance devices. This module is equipped with low PIR sensor that allows you to monitor places with low activity movements for a long period of time.

The module is placed manually to the covert PIR module, which makes it virtually unrecognizable from the real PIR sensor.

PACKAGE CONTAINS:



QUICK SET-UP GUIDE:

IMPORTANT:

- You have to set the time manually on your SD card with Notepad If you don't have a external AV display
- It comes **standardly in PIR mode** detection preset and HD resolution
- To access OSD menu you have to connect AV cable (resolution, time, length of recordings)
- You also need external display to access the OSD menu
- By pressing PIR button you will enter STAND BY mode (you can make pictures etc. with remote)
- Battery charging can take up to 12 hours



- 1. Place in SD Card -> Turn On -> MODULE IS IN PIR MODE
- 2. You can deactivate the PIR Mode by pressing PIR button —> YOU WILL ENTER STANDBY

STEP 2
Connecting to OSD menu

- 1. Connect with AV cable
- 2. Press MENU and navigate through the menu with Remote

STEP 3


1. Place the camera in your designated spot, charging battery can take up to 12 hours.

DIODE SIGNALS

DIODE **FUNCTION GREEN light** Stand-by Taking picture 1X FLASH RED **4X FLASH RED** Not charged / shutting down 3sec RED + 2sec GREEN Turning on 3x FLASH GREEN Continous recording 2x FLASH GREEN + 4x FLASH RED+ 2sec RED+ 3x Recording in PIR activation (best battery) **FLASH RED** 3x RED AND GREEN FLASHING Motion Detection (worse battery) **GREEN FLASHING** SD Card is not inserted

TIME SETTING

- 1. Create a .txt file called "time.txt"
- 2. Place in current date and time in following format: RRRR.MM.DD HH:MM:SS
- 3. Put on the SD Card in the core directory.

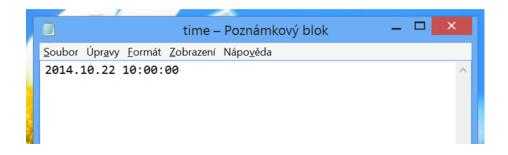

USEFUL INFORMATION

If battery is fully discharged, charging will start 3 min after connecting the device into power supply.

We recommend to format battery before you start using the device. Charge the device at least 6hours and then let it discharged. Repeat three times. After device will be fully formatted, charge it for 5 hours, ideally.

Record a sample video, to test the device under various light conditions.

DISCLAIMER

This user manual can be slightly different from specific product.

Before start using the device, check with your local legal conditions. Neither supplier nor distributor assume responsibility for using device in conflict with local law.