

USER MANUAL: STronic URP 450




**STronic URP 450** is very powerful yet very small device. It has a USB MINI port for easy data extraction. The module is equipped with very sensitive microphone which allows you to get really good quality sound with extra long battery life. It has extended memory to **8gb** and internal program for time setting.

Device is very compact and easy to use.

## STronic URP 450

#### FIGURE 1

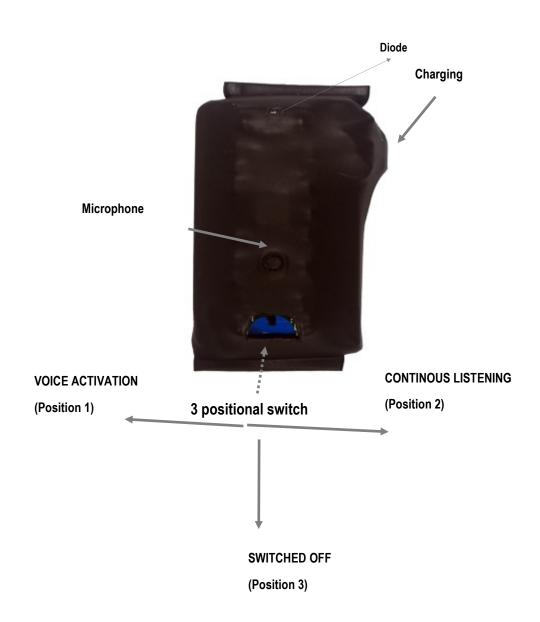

## **QUICK SET-UP GUIDE:**

#### **IMPORTANT:**

- DEVICE CHARGES WITH CABLE ONLY (faster charging is with enclosed adaptor)
- USE APPROPRIATE OPERATING SYSTEM (Windows XP,7,8,8.1, 10 & MacOs)
- DEVICE IS NOT WATER RESISTANT



When you place the device on the table, with the connector facing up, like on the FIGURE 2, and you push the switch **to the left** you will activate the mode of continuous listening. In the basic module STronicURP 450 the second number denotes the amount of hours in this case **150 hours** that the device can record.

POSITION 2

When you place the device on the table, with the connector facing up, like on the FIGURE 2, and you push the switch **to the right** you will activate the mode of continuous listening. In the basic module STronicURP 450 **the first number** denotes the amount of days in this case **250 days** that the device can last in standby.

POSITION 3
SWITCHING OFF

When you put this device into Position 3, it will be SWITCHED OFF.

# Time set-up


Run the application StealthTronic.exe



#### Select the desired

- YYYY = Year = 2016
- MM = Month = 10
- DD = Day = 02

This date would refer to 2.10.2016

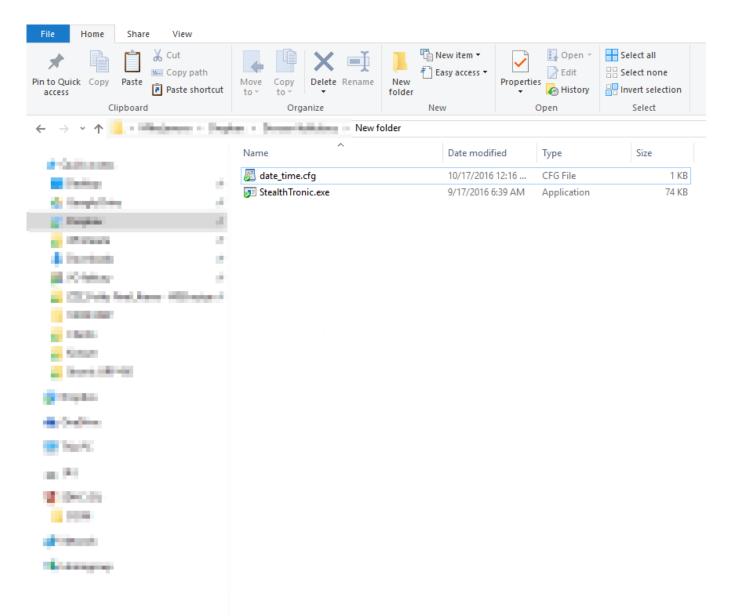

File with date and time configuration will be created. This will create the filed which will be recorder onto URP with a time stamp.

TIP: If you need to make recording from last year, you can you simply change the time to whatever date you need.

### **TECHNICAL SPECIFICAITON**

Battery Life: 140 Hrs

**Standby Time:** 450 Days in voice activation

**Charging Time:** 6 hrs

Size: 54 x 34 x 26 mm

Weight: 86 g

## **PACKAGE CONTENT**

- 1. STronic URP 450
- 2. Software for changing date
- 3. Charger
- 4. USB MINI cable

#### **USEFUL INFORMATION**

If battery is fully discharged, charging will start 3 min after connecting the device into power supply.

We recommend to format battery before you start using the device. Charge the device at least 10 hours and then let it discharged. Repeat three times. After device will be fully formatted, charge it for 8 hours, ideally.

#### **CHARGING**

When unplugged from the cable:

0-30% battery: No falsh or light

30-70% battery: One flash

70—100% battery: Light ON

### **DISCLAIMER**

This user manual can be slightly different from specific product.

Before start using the device, check your local legal terms. Neither supplier nor distributor don't assume and responsibility for using device in conflict with local law.